

PA-5000 Series Hardware Reference Guide



Contact Information

<http://www.paloaltonetworks.com/contact/contact/>

About this Guide

This guide describes the PA-5000 Series firewall hardware, provides instructions on installing the hardware, describes how to perform maintenance procedures, and provides product specifications. This guide is intended for system administrators responsible for installing and maintaining the PA-5000 Series firewall.

All PA-5000 Series devices run PAN-OS, a purpose-built operating system with extensive functionality. For additional information, refer to the following resources:

- For information on the additional capabilities and for instructions on configuring the features on the firewall, refer to <https://www.paloaltonetworks.com/documentation>.
- For access to the knowledge base, complete documentation set, discussion forums, and videos, refer to <https://live.paloaltonetworks.com>.
- For contacting support, for information on the support programs, or to manage your account or devices, refer to <https://support.paloaltonetworks.com>.
- For the latest release notes, go to the software downloads page at <https://support.paloaltonetworks.com/Updates/SoftwareUpdates>.
- For capacity and performance information for all Palo Alto Networks firewalls, refer to <https://www.paloaltonetworks.com/products/product-selection.html>.

To provide feedback on the documentation, please write to us at:
documentation@paloaltonetworks.com.

Palo Alto Networks, Inc.

www.paloaltonetworks.com

© 2007–2017 Palo Alto Networks, Inc. Palo Alto Networks is a registered trademark of Palo Alto Networks. A list of our trademarks can be found at <http://www.paloaltonetworks.com/company/trademarks.html>. All other marks mentioned herein may be trademarks of their respective companies.

Revision Date: August 1, 2017

Part number: 810-000056-00H

Table of Contents

Chapter 1

Overview	5
Front Panel	6
Back Panel	8

Chapter 2

Installing the Hardware	9
Tamper Proof Statement	9
Before You Begin	9
Equipment Rack Installation	10
Connecting Cables to the Device	11
Connecting Power	12
Connecting a DC Power Supply	13

Chapter 3

Maintaining the Hardware	15
Cautions and Warnings	15
General Cautions/Warnings	15
DC Power Related Cautions/Warnings	16
Interpreting Status LEDs	18
Interpreting the Device LEDs	18
Interpreting the Port LEDs	19
Interpreting the Power Supply LED	20
Replacing a Power Supply	20
Replacing an AC Power Supply	20
Replacing a DC Power Supply	21
Replacing a Hard Disk or Solid State Drive	22
Choosing System Options for the Drive	24
Replacing the Fan Tray and Air Filter	25
Replacing the Air Filter	27

Chapter 4	
Specifications	29
Physical Specifications	29
Interface Specifications	30
Electrical Specifications	30
Environmental Specifications	31
Chapter 5	
Compliance Statement	33
NEBS Requirements	33
VCCI Statement	34
BSMI EMC Statement	34

Chapter 1

Overview

This chapter describes the features of the front and back panel of the PA-5000 Series firewall. For more information, refer to the following topics:

- “Front Panel” on page 6
- “Back Panel” on page 8

Front Panel

Figure 1 shows the front panel of the PA-5060 and PA-5050 and Table 1 describes the front panel features.

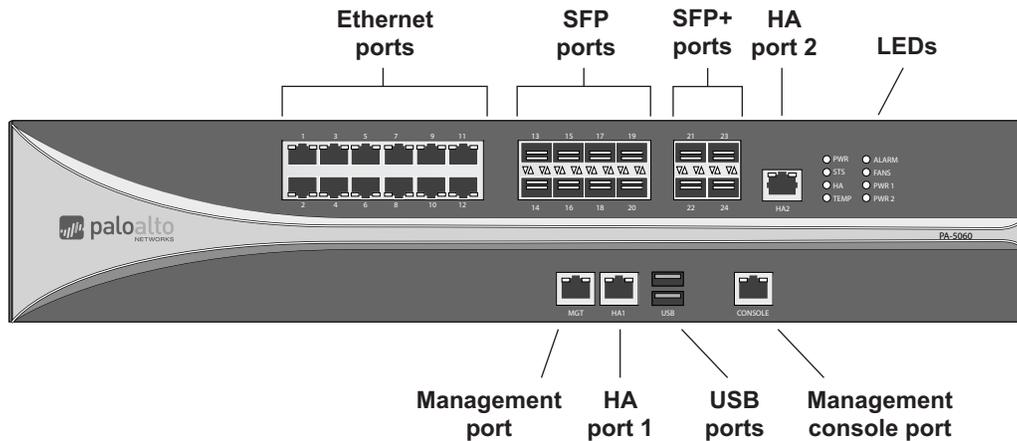


Figure 1. PA-5060 and PA-5050 Front Panel

Table 1. PA-5060 and PA-5050 Front Panel Features

Item	Description
Ethernet ports	12 RJ-45 10/100/1000Mbps ports for network traffic.
SFP ports	Eight Small Form-Factor Pluggable (SFP) ports for network traffic.
SFP+ ports	Four SFP+ ports for network traffic.
Management port	One RJ-45 port to access the device management interfaces through an Ethernet interface.
Management console port	One RJ-45 port for connecting a serial console.
High-availability (HA) ports	Two RJ-45 ports for high-availability (HA) control and synchronization.
USB ports	One USB port that accepts a USB flash drive that contains a bootstrap bundle (PAN-OS configuration) that enables you to bootstrap the firewall. Bootstrapping enables you to provision the firewall with a specific configuration, license it, and make it operational on the network. The firewall must have PAN-OS 7.1 or later installed to use this feature. Prior to PAN-OS 7.1, this port is disabled. For information on bootstrapping, refer to Bootstrap the Firewall in the PAN-OS® Administrator's Guide Version 7.1 .
LED dashboard	Eight LEDs indicating system status. Refer to “Interpreting the Device LEDs” on page 18 for LED definitions.

Figure 2 shows the front panel of the PA-5020 Series and Table 2 describes the front panel features.

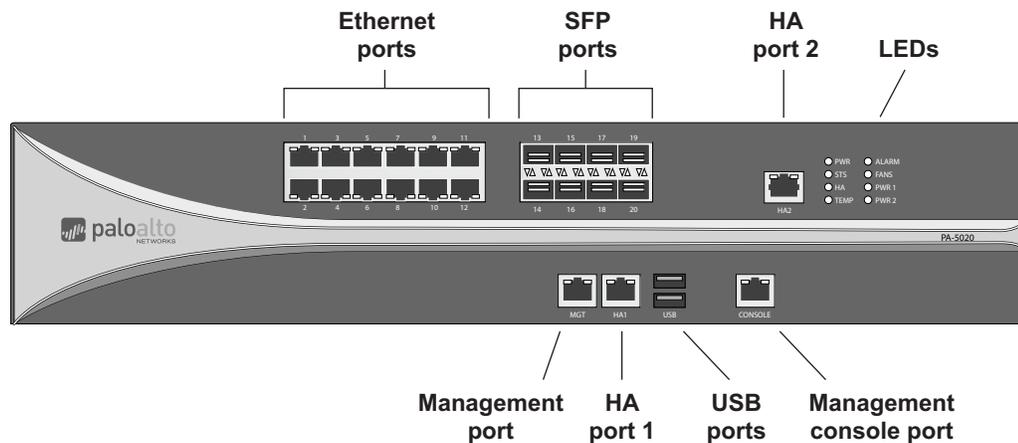


Figure 2. PA-5020 Front Panel

Table 2. PA-5020 Front Panel Features

Item	Description
Ethernet ports	12 RJ-45 10/100/1000Mbps ports for network traffic.
SFP ports	Eight Small Form-Factor Pluggable (SFP) ports for network traffic.
Management ports	One RJ-45 port to access the device management interfaces through an Ethernet interface.
Management console port	One RJ-45 port for connecting a serial console.
High-availability (HA) ports	Two RJ-45 ports for high-availability (HA) control and synchronization.
USB ports	One USB port that accepts a USB flash drive that contains a bootstrap bundle (PAN-OS configuration) that enables you to bootstrap the firewall. Bootstrapping enables you to provision the firewall with a specific configuration, license it, and make it operational on the network. The firewall must have PAN-OS 7.1 or later installed to use this feature. Prior to PAN-OS 7.1, this port is disabled. For information on bootstrapping, refer to Bootstrap the Firewall in the PAN-OS® Administrator's Guide Version 7.1 .
LED dashboard	Eight LEDs indicating system status. Refer to “Interpreting the Device LEDs” on page 18 for LED definitions.

Back Panel

Figure 3 shows the back panel of the PA-5000 Series and Table 3 describes the back panel features.

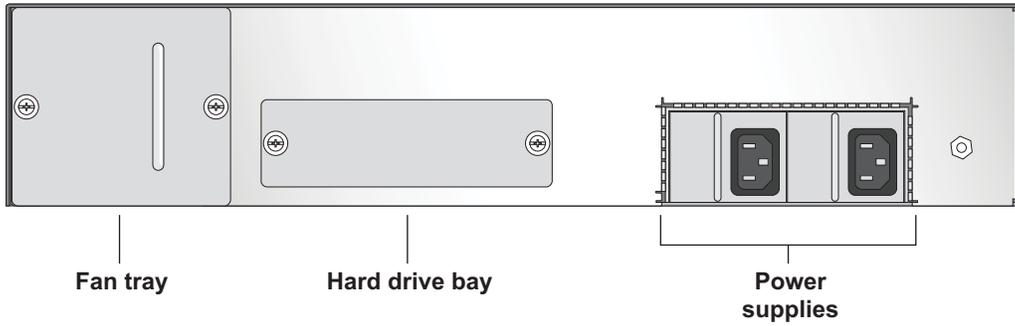


Figure 3. Back Panel

Table 3. Back Panel Features

Item	Description
Power supplies	2 redundant, hot-swappable power supplies.
Fan tray	Removable fan tray and filter.
Hard disk drive bay	Hard drive bay for 2 x 2.5-inch hard disk drives.

The PA-5000 Series does not have a power button. The device is powered by plugging power cords into the power supplies. Refer to “Replacing a Power Supply” on page 20 for instructions on replacing the power supplies.

Chapter 2

Installing the Hardware

This chapter describes how to install the PA-5000 Series firewall. For more information, refer to the following topics:

- “Tamper Proof Statement” on page 9
- “Before You Begin” in the next section
- “Equipment Rack Installation” on page 10
- “Connecting Cables to the Device” on page 11
- “Connecting Power” on page 12

Tamper Proof Statement

To ensure that products purchased from Palo Alto Networks have not been tampered with during shipping, verify the following upon receipt of each product:

- The tracking number provided to you electronically when ordering the product matches the tracking number that is physically labeled on the box.
- The integrity of the tamper-proof tape used to seal the box is not compromised.
- The integrity of the warranty label on the firewall is not compromised.

Before You Begin

- It is recommended that two people be available to mount the PA-5000 Series in a 19-inch rack.
- Have a Phillips head screwdriver available.
- Verify that the intended location has adequate air circulation and meets the temperature requirements. Refer to “Environmental Specifications” on page 31.
- Allow clear space on both sides of the device.
- Unpack the device.

- Verify that power is not connected to the device.

Equipment Rack Installation

Before installing the hardware, read the information in “Cautions and Warnings” on page 15.

Figure 4 illustrates how rack mounting brackets are attached to the PA-5000 Series. You can attach the brackets using the holes at the front or the midpoint of the unit.

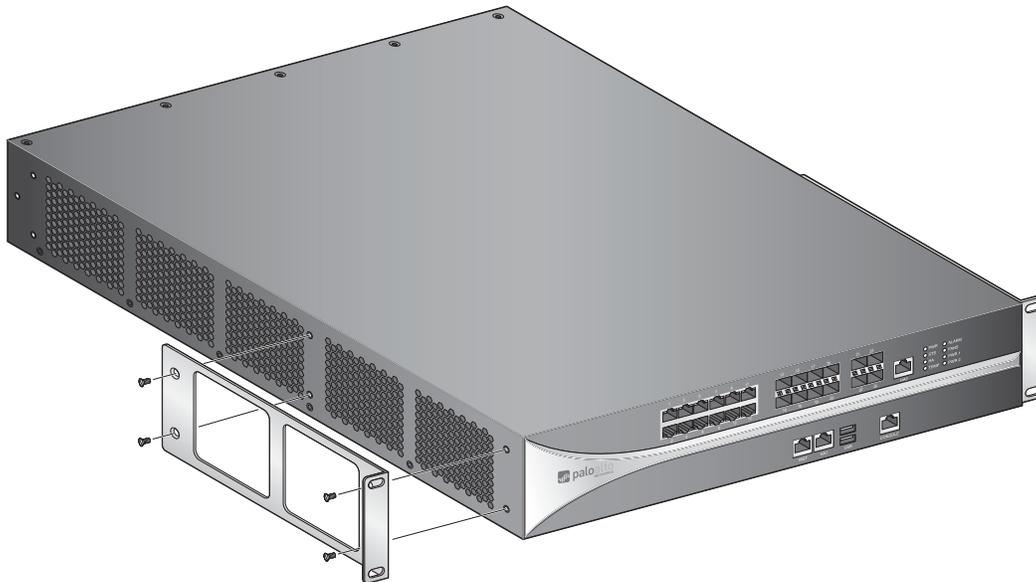


Figure 4. Attaching Rack Mounting Brackets

The following safety guidelines apply to rack installation:

- **Elevated ambient operating temperature**—If the PA-5000 Series is installed in a closed or multi-unit rack assembly, the ambient operating temperature of the rack environment may be greater than the ambient room temperature. Verify that the ambient temperature of the rack assembly meets the maximum rated ambient temperature requirements listed in “Environmental Specifications” on page 31.
- **Reduced air flow**—Ensure that the airflow required for safe device operation is not compromised by the rack installation.
- **Mechanical loading**—Ensure that the rack-mounted device does not cause hazardous conditions due to uneven mechanical loading.
- **Circuit overloading**—Ensure that the circuit that supplies power to the device is sufficiently rated to avoid circuit overloading or excess load on supply wiring. Refer to “Electrical Specifications” on page 30.

To install the PA-5000 Series in a grounded 19-inch rack:

1. Screw the rack mounting brackets onto the front or midpoint of the unit using a Phillips head screwdriver.
2. Lift the device and position it in the rack. It is recommended that two people perform this function.

3. Align the mounting holes on the side of the device with holes in the rack rail. Make sure that rack rail holes are selected so that the PA-5000 Series is level.
4. Insert mounting screws into the aligned holes. Tighten with a Phillips head screwdriver.

Connecting Cables to the Device

Figure 5 shows the cable connections of the PA-5060 and PA-5050. Refer to Table 1 for descriptions of the front panel interfaces.

Before working with fiber optic cabling, read the information in “Cautions and Warnings” on page 15 related to laser radiation.

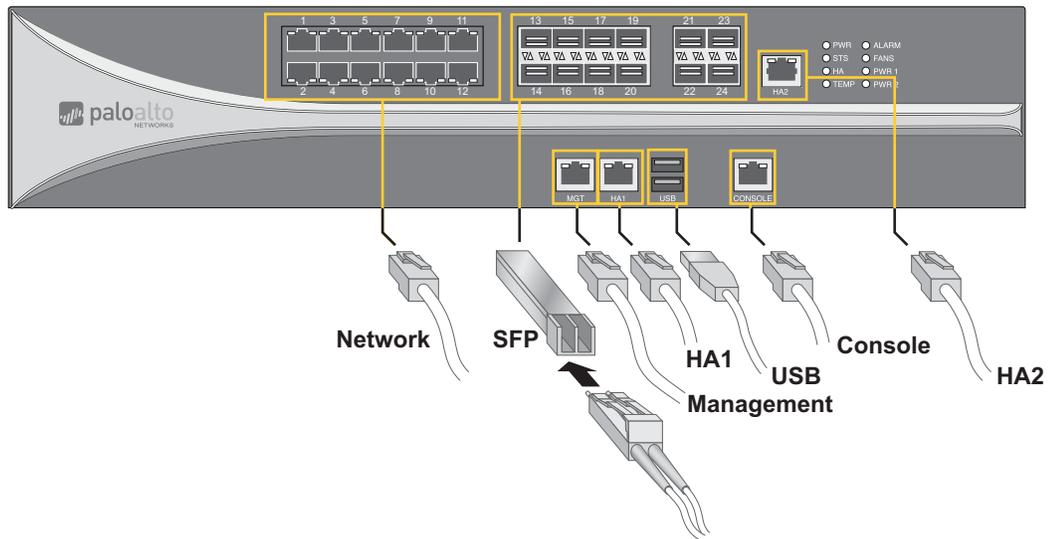


Figure 5. Cable Connections for the PA-5060 and PA-5050

Figure 6 shows the cable connections of the PA-5020. Refer to Table 2 for descriptions of the front panel interfaces.

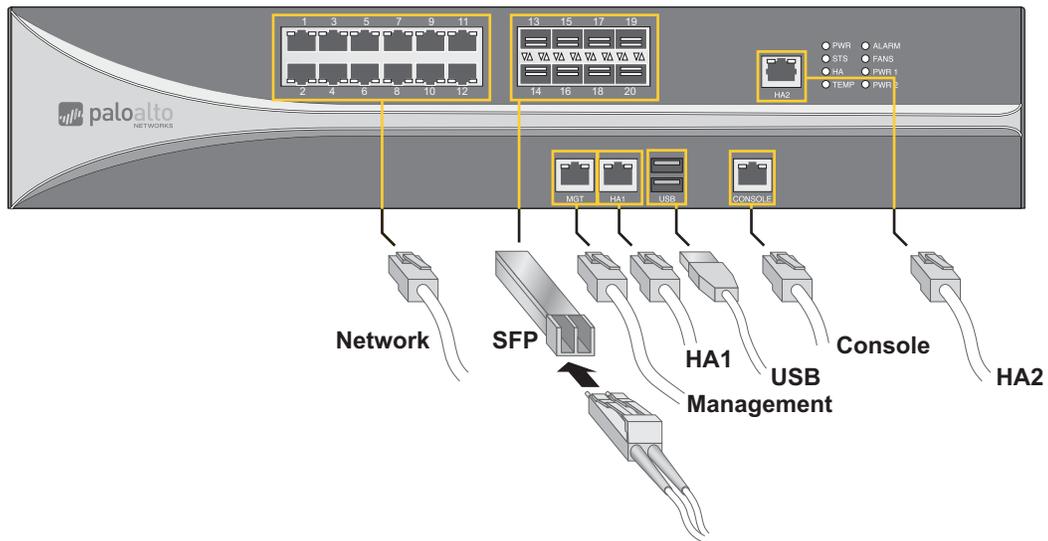


Figure 6. Cable Connections for the PA-5020

Connecting Power

Figure 7 shows the AC power connections for the PA-5000 Series.

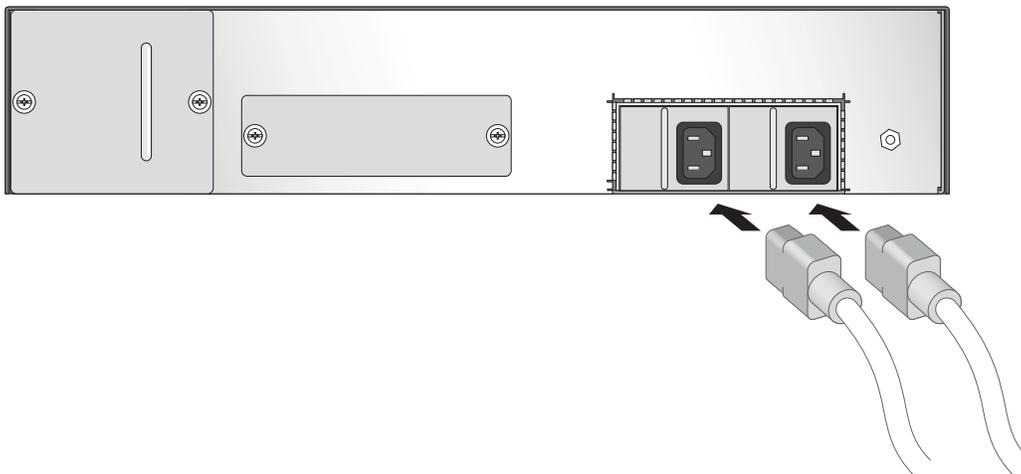


Figure 7. Power Connection for the PA-5000 Series

To power up the PA-5000 Series, attach a power cable to each of the power supplies and plug each into a grounded wall outlet. The device has no power switch and is automatically powered when one or more power cables are connected to the device and to an AC power source.

Connecting a DC Power Supply

Before connecting power, read the “Cautions and Warnings” on page 15.



DC Power Safety

WARNING: You must shut off the electric current to the DC feed wires before connecting or disconnecting the wires to the power supplies.

Figure 8 shows the DC power connections for the PA-5000 Series.

Wind the power wires around the screws and tighten to secure. The -48VDC connection is on the left and the 0VDC connection is on the right, as labeled when facing the power supply. Turn on the electric current to the DC feed.

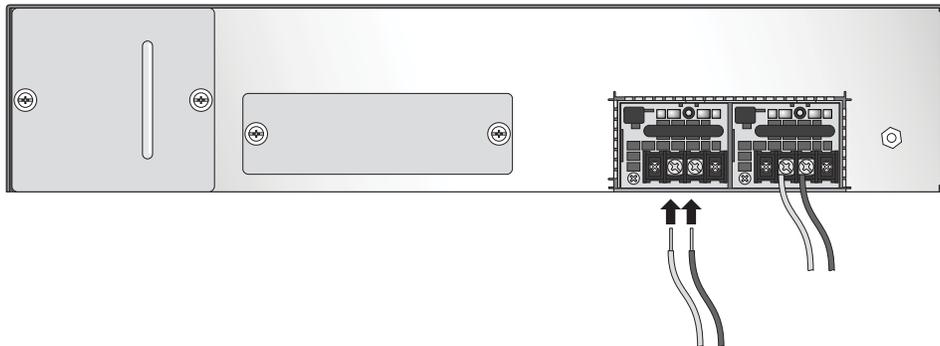


Figure 8. DC Power Supply - Attachment

Chapter 3

Maintaining the Hardware

This chapter describes how to replace power supplies, interpret LEDs, and troubleshoot hardware problems. Before continuing, read “Cautions and Warnings” on page 15.

For information on servicing the hardware, refer to the following topics:

- “Cautions and Warnings” on page 15
- “Interpreting Status LEDs” on page 18
- “Replacing a Power Supply” on page 20
- “Replacing a Hard Disk or Solid State Drive” on page 22
- “Replacing the Fan Tray and Air Filter” on page 25

Cautions and Warnings

The following lists cautions and warnings that must be observed before working with the hardware.

THIS PRODUCT COMPLIES WITH 21 CFR 1040.10 and 1040.11

French Translation: CE PRODUIT EST CONFORME AUX NORMES 21 CFR 1040.10 ET 1040.11

- “General Cautions/Warnings” on page 15
- “DC Power Related Cautions/Warnings” on page 16

General Cautions/Warnings

This section describes general cautions and warnings related to working with the hardware:



CAUTION: *RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS" (Cl. 1.7.15)*

French Translation:

ATTENTION: *RISQUE D'EXPLOSION SI LA BATTERIE EST REMPLACÉE PAR UN MODÈLE DE TYPE INCORRECT. METTEZ AU REBUT LES BATTERIES USAGÉES CONFORMÉMENT AUX INSTRUCTIONS (CL. 1.7.15)*



CAUTION: *Equipment may be affected by electrostatic discharge. ESD reduction procedures (wearing a wrist strap) must be implemented during the installation and maintenance of equipment.*



CAUTION: *Shielded interface cables which are grounded must be used to ensure agency compliance with electromagnetic emissions (EMC).*



WARNING: *Laser radiation exposure should be avoided. Cover any unused fiber optical ports. Do not look directly at exposed fiber optical transmitters or cables.*



WARNING: *To reduce the risk of electric shock, disconnect all power supply cords before servicing the switch (the switch might have more than one).*

French Translation:

Pour réduire le risque de choc électrique, débranchez tous les câbles d'alimentation avant d'intervenir sur le commutateur (il peut en comporter plusieurs).

DC Power Related Cautions/Warnings

This section lists cautions and warnings for the hardware when DC power supplies are installed:



WARNING: *You must shut off the electric current to the DC feed wires before connecting or disconnecting the wires from the DC power supply.*



CAUTION: All devices that use DC power are intended for installation in restricted access areas only. A restricted access area is where access can be gained only by service personnel through the use of a special tool, lock and key, or other means of security, and is controlled by the authority responsible for the location.



CAUTION: For the DC input circuit, make sure there is a 15 amp circuit breaker, minimum 48VDC, and double pole on the input to the DC power.



CAUTION: For a DC system, use a grounding wire of at least 14 American Wire Gauge (AWG). The 14 AWG wire should be attached to an agency-approved crimp connector (Tyco 34120 or certified Lug), crimped with the proper crimping tool and attached to the protective grounding lug, using a size #8-32 nut and a star washer (supplied), on the chassis with the other end connected to the building ground. Torque the nut to 15 in.-lbs. Do not over tighten.



CAUTION: This equipment is designed to permit the connection of the earthed conductor of the DC supply circuit to the earthing conductor at the equipment. See installation instructions.

French Translation:

CAUTION: ATTENTION : Cet équipement est conçu pour permettre de connecter le conducteur de terre du circuit d'alimentation CC au conducteur de terre de l'équipement. Reportez-vous aux instructions d'installation.

Important notes on connecting DC power:

- If a DC connection is used, all of the following conditions must be met:
 - This equipment must be connected directly to the DC supply system earthing electrode conductor or to a bonding jumper from an earthing terminal bar or bus to which the DC supply system earthing electrode conductor is connected.
 - This equipment must be located in the same immediate area (such as adjacent cabinets) as any other equipment that has a connection between the earthed conductor of the same DC supply circuit and the earthing conductor, and also the point of earthing of the DC system.
 - The DC system must not be earthed elsewhere.
 - The DC supply source must be located within the same premises as this equipment.

Switching or disconnecting devices must not be in the earthed circuit conductor between the DC source and the point of connection of the earthing electrode conductor.

Interpreting Status LEDs

This sections describes the device, port, and power supply LEDs that will enable you to determine the status of these components.

- “Interpreting the Device LEDs” on page 18
- “Interpreting the Port LEDs” on page 19
- “Interpreting the Power Supply LED” on page 20

Interpreting the Device LEDs

Figure 9 shows the LED dashboard on the front panel of the PA-5000 Series, and Table 4 describes the LED functions and states.

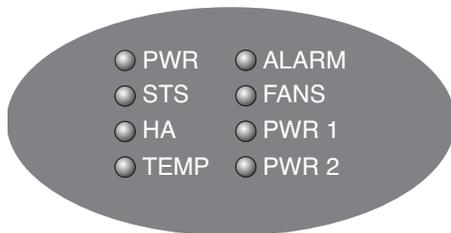


Figure 9. Front Panel LEDs

Table 4. Functions and States of the LED Dashboard

LED	State	Description
PWR (POWER)	Green	The device is powered.
	Off	Power is off.
STS (STATUS)	Green	The device is operating normally.
	Yellow	The device is booting up.
HA	Green	This device is the current active device.
	Yellow	This device is the current passive device.
	Off	High availability (HA) is not enabled on this device.
TEMP	Green	The temperature is normal.
	Yellow	The temperature is outside the normal tolerance.
ALARM	Red	There is a hardware failure, which may include power supply detected but not working, fan failure, Hard drive failure, HA failover, or temperature above high temperature threshold.
	Off	The device is operating normally.
FANS	Green	All fans are operating normally.
	Red	One or more fans have failed.

Table 4. Functions and States of the LED Dashboard (Continued)

LED	State	Description
PWR 1	Green	The left power supply (facing the back of the firewall) is powered and active, or is not installed.
	Red	The left power supply (facing the back of the firewall) is detected but not working. The power supplies also have an LED that indicates the status, see “Interpreting the Power Supply LED” on page 20.
PWR 2	Green	The right power supply (facing the back of the firewall) is powered and active, or is not installed.
	Red	The right power supply (facing the back of the firewall) is detected but not working. The power supplies also have an LED that indicates the status, see “Interpreting the Power Supply LED” on page 20.

Interpreting the Port LEDs

Table 5 describes the LEDs for the PA-5000 Series Ethernet ports. Refer to Figure 1.

Table 5. Ethernet and SFP Port LEDs

LED	Description
Left	Shows green if there is a network link.
Right	Blinks green if there is network activity.

Table 6 describes the LEDs for the PA-5060/PA-5050 Gigabit Small Form-Factor Pluggable (SFP+) ports. Refer to Figure 2.

Table 6. SFP+ Port LEDs

LED	Description
Left	Shows green if there is a network link.
Right	Blinks green if there is transmit (TX) network activity.

Table 7 describes the LEDs for the PA-5000 Series Management port. Refer to Figure 1 and Figure 2.

Table 7. PA-5000 Series Management and HA1 Port LEDs

LED	Description
Left	Shows solid amber if there is a network link and blinks amber if there is network activity.
Right	<ul style="list-style-type: none"> • Shows green if link is 100Mbps • Shows amber if link is 1Gbps • Shows the off state if link is 10Mbps

Interpreting the Power Supply LED

The PA-5000 Series firewall has two power supplies and each power supply has an LED located above the power cord to indicate status. Table 8 describes the LEDs located on the back of each power supply.

Table 8. Power Supply LED

LED	State	Description
Power Supply	Green	The power supply is operating normally.
	Off	The system detected a loss of power, either due to loss of power connection, failure of the power supply, or incorrect input voltage being supplied. The power supply LED located above the power plug will go off and the front panel PWR LED and ALARM LED turn red.

Replacing a Power Supply

The PA-5000 Series firewall has two hot-swappable AC or DC power supplies. Both power supplies should be connected during normal operations. If the system detects a loss of power, either due to loss of power connection, failure of the power supply, or incorrect input voltage being supplied, the power supply LED located above the power plug will go off and the front panel PWR LED and ALARM LED turn red. If enabled, an audible alert will sound until both power supplies are operational. The audible alert is disabled by default and can be enabled by running `set system setting power-supply audible-alarm enable yes`.

Replacing an AC Power Supply

Before servicing the hardware, read the information in “Cautions and Warnings” on page 15.

To replace the AC PWR1 or PWR2 power supply:

1. While the PA-5000 Series is running, unplug the power cord from the power supply that you need to replace.
2. Push the lever to the right and use the handle to slide the power supply out of the device, as shown in Figure 10.
3. Slide a replacement power supply into the device.
4. Connect the power cable to the power supply and to an AC power source.



Note: If enabled, an audible alert will sound until two power supplies are installed and operational. The audible alert is disabled by default and can be enabled by running set system setting power-supply audible-alarm enable yes.

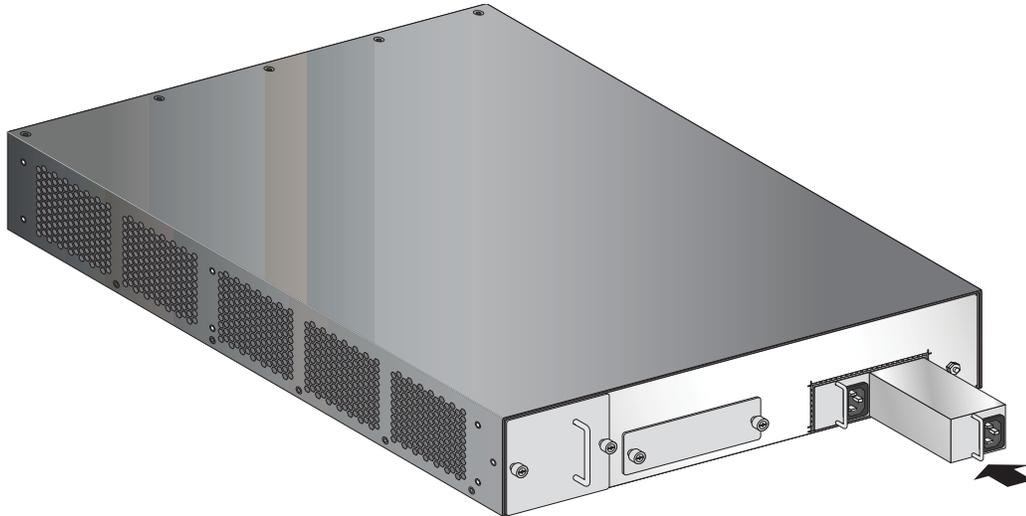


Figure 10. AC Power Supply Replacement

Replacing a DC Power Supply

Before servicing the hardware, read the information in “Cautions and Warnings” on page 15.



WARNING: You must shut off the electric current to the DC feed wires before connecting or disconnecting the wires from the DC power supply.

To replace the DC PWR1 or PWR2 power supply:

1. While the PA-5000 Series is running, loosen the screws that secure the power wires and remove the wires from the power supply that you need to replace, as shown in Figure 11.

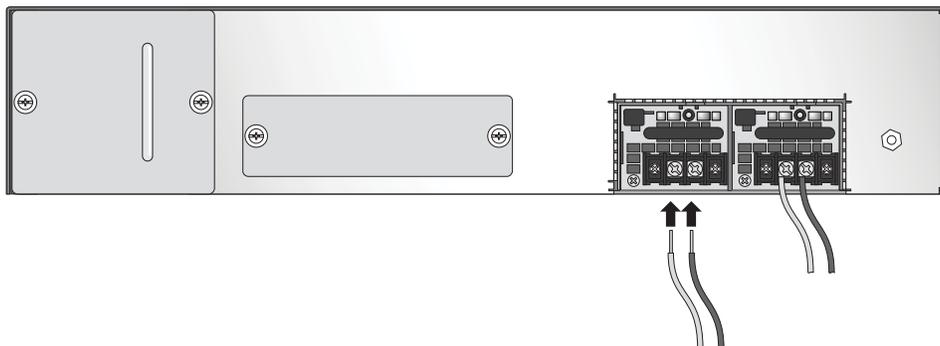


Figure 11. DC Power Supply - Wire Removal and Attachment

2. Use the handle to slide the power supply out of the device, as shown in Figure 12.
3. Slide a replacement power supply into the device.
4. Wind the power wires around the screws and tighten to secure. The -48VDC connection is on the left and the 0VDC connection is on the right, as labeled when facing the power supply.
5. Turn on the electric current to the DC feed.



Note: If enabled, an audible alert will sound until two power supplies are installed and operational. The audible alert is disabled by default and can be enabled by running `set system setting power-supply audible-alarm enable yes`.

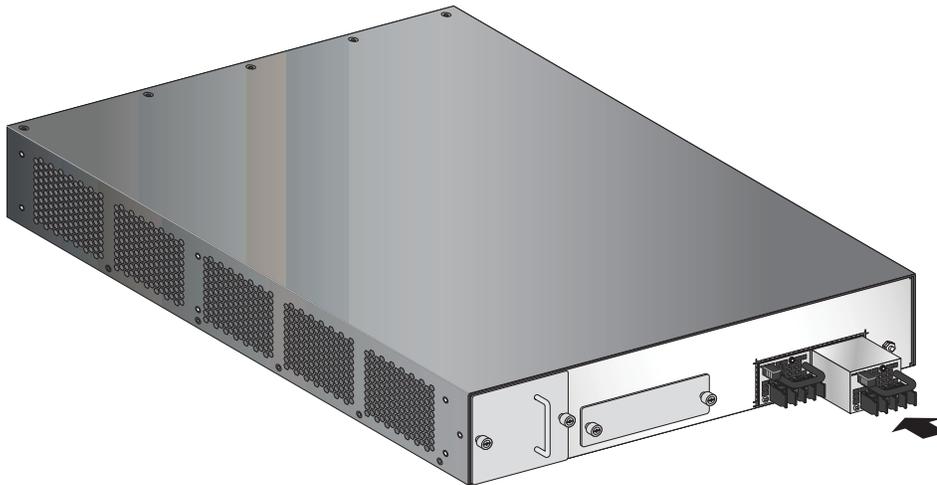


Figure 12. DC Power Supply Replacement

Replacing a Hard Disk or Solid State Drive

The PA-5000 Series firewall has a bay that contains two 2.5-inch Serial Advanced Technology Attachment (SATA) hard disk drives or solid state drives (SSD). You must power down the firewall to replace either of the drives.



Note: When replacing a failed drive, you may receive a pair of replacement drives of higher capacity than those previously installed. This is to ensure that the drive size and drive model are the same within the RAID 1 array. For systems in a high availability (HA) pair there is no requirement that the drive sizes match between the paired systems.

To replace a drive:

1. Identify the failed drive using the system log. The drive LED indicates if a drive is failed, but does not indicate which drive.
2. Power down the firewall.
3. Loosen the thumbnail screws for the disk drive bay using a flat or Phillips head screw driver, if necessary.

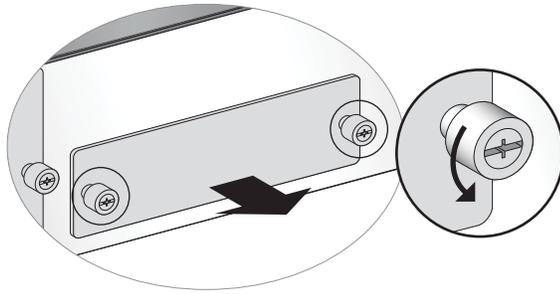


Figure 13. Loosening the Thumbnail Screws for the Drive Bay

4. Remove the metal plate that covers the disk drive bay.
5. Push the button to the right of the drive to disengage the lever and release the drive.

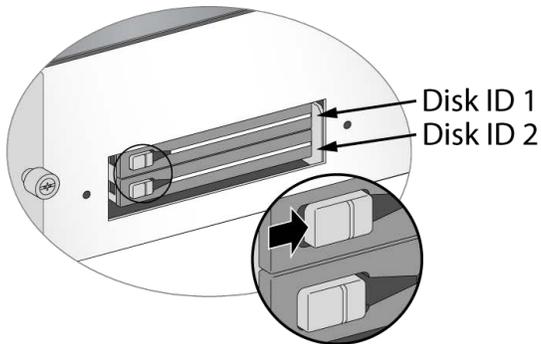


Figure 14. Releasing a Drive

6. Gently pull the lever open to partially eject the drive, and then slide the drive out from the enclosure.

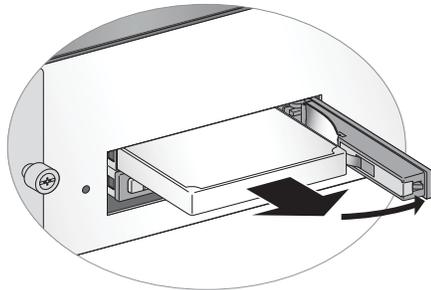


Figure 15. Removing a Drive

7. Slide the replacement drive in, label side up, gently pushing it in until the lever begins to close.
8. Gently close the lever until it clicks into place.

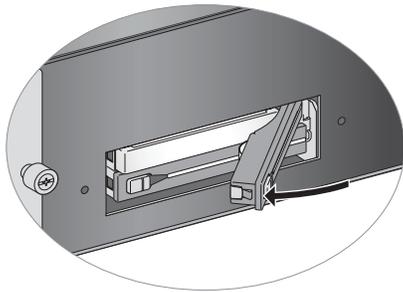


Figure 16. Replacing a Drive

9. Replace the metal plate and secure the thumb screws using a flat or Phillips head screw driver.
10. Power on the firewall.

Choosing System Options for the Drive

When the system boots, you are presented with the following options:

- **Adding blank but identical drive**

This is the expected case when a drive fails and a new drive is shipped. In this case, the part numbers of the existing and new hard drives match and the new drive is completely blank. The system powers up normally, the new drive is added to the RAID partition without any user interaction, and background RAID syncing starts. Until the RAID sync is completed the alarm LED is RED, indicating that there is a single point of failure in the system. When the RAID sync completes, the alarm becomes GREEN. This process could take up to an hour or so with non SSD drives.
- **Adding blank but different drive**

In this scenario, the new drive is blank but has a different part number. This is the expected case when migrating from standard to SSD drives. The system will start to boot, it will determine that the drives are different, and then it will boot into maintenance mode with the reason “Drive model mismatch.” You are then presented with the following options:

 - Add the new drive to the array, ignoring the model mismatch. This is the expected case if hard drive models are changed. In this case the drives will be compatible, but have different model numbers. The drive will be added to the array and you will be given an option to reboot. Upon reboot, the system behavior will be the same as if an identical drive was replaced.
 - Migrate from one drive to the other. This will format the new drive to maximum capacity, copy all contents from the old drive to the new drive, and add the new drive to the array. After the migration process is completed, a message is displayed to power down the system, remove the old drive, insert the new drive (if any), and power the system back on. If you are migrating from a larger drive to a smaller drive, you are warned that all saved logs are removed because there is no guaranteed that they will be fully copied.
- **Adding old drive back into system**

If two synced and running drives ever become unsynced, for example, because one drive was removed for some time, the system will determine that two valid drives paired to the serial number or the system are present and will boot into maintenance mode. In maintenance mode, you will be

required to select which drive is primary and then given the option to reboot. Upon rebooting, the system will add the secondary drive to the primary drive's RAID array and then the system behavior will be the same as if an identical drive was replaced. Note that it may require one extra automatic reboot to correctly set up the system (due to how automatic RAID selection works).

Replacing the Fan Tray and Air Filter



Note: You can replace the fan tray while the firewall is powered on; however, you must replace it within 20 seconds, or the thermal protection circuit will automatically shut down the firewall.

To replace the fan tray and air filter:

1. Identify the fan failure using the system log or fan LED.
2. Make sure the new fan tray is unpacked and ready to slide into the chassis.
3. Loosen the thumbnail screws for the fan tray bay using a flat or Phillips head screw driver, if necessary.

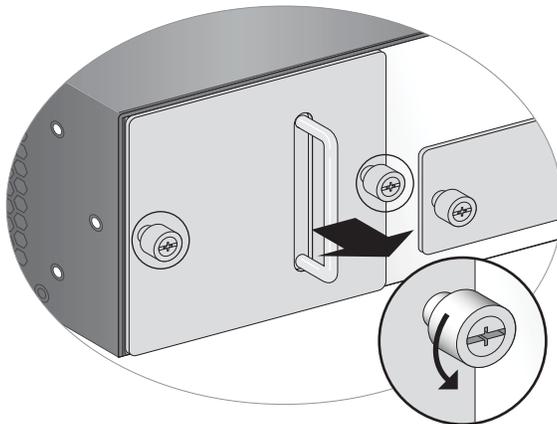


Figure 17. Loosening the Thumbnail Screws for the Fan Tray and Air Filter

Replacing the Fan Tray and Air Filter

4. Remove the metal plate that covers the fan tray.
5. Hold the fan tray handle and slide the tray out. The air filter slides out along with the fan tray.

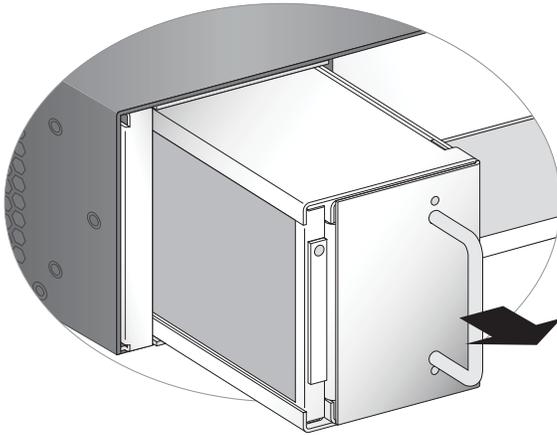


Figure 18. Removing the Fan Tray and Air Filter

6. Slide the replacement fan tray in until it engages. You must slide the new tray in within 20 seconds or the firewall will power down automatically.
7. Replace the metal plate and secure the thumb screws using a flat or Phillips head screw driver.

Replacing the Air Filter

Inspect the air filter on a periodic basis. A dirty air filter restricts airflow in the unit, reducing the ventilation and effective cooling of the system. To maintain optimum system operation, Palo Alto Networks recommends that you replace the filter every 6 months. Discard used filters; do not attempt to clean and reuse them. You can purchase replacement air filters from Palo Alto Networks or an authorized reseller.

You can replace the air filter without replacing the full fan tray. It is not necessary to power down the firewall to replace the air filter.

To replace the air filter.

1. Remove the fan tray metal cover, as described in “Replacing the Fan Tray and Air Filter” on page 25.
2. Gently lift the plastic tab and slide the air filter out.

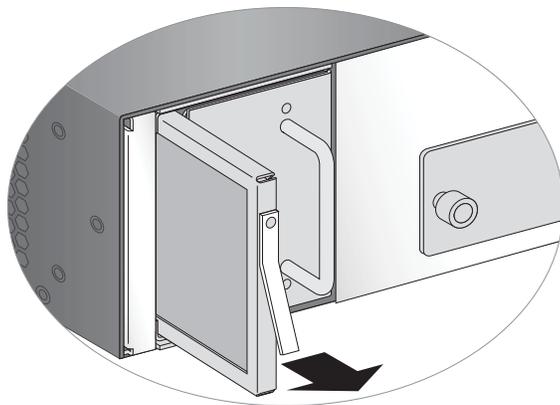


Figure 19. Removing the Air Filter

3. Slide the new filter in, making sure that the plastic tab on the new filter faces out with the screw that secures the plastic tab at the top.
4. Replace the metal plate and secure the thumb screws, using a flat or Phillips head screw driver.

Chapter 4

Specifications

This chapter provides specifications for the PA-5000 Series firewall. For more information, refer to the following topics:

- “Physical Specifications” in the next section
- “Interface Specifications” on page 30
- “Electrical Specifications” on page 30
- “Environmental Specifications” on page 31

Physical Specifications

Table 9 lists physical specifications for the PA-5000 Series.

Table 9. Physical Specifications

Specification	Description
Height	3.5 inches (2 RU)
Depth	20.5 inches
Width	17.5 inches
Weight	41 lbs (Shipping weight 55 lbs)
Mounting	Standard 19-inch rack
Power supplies	Two self-contained hot-swappable

Interface Specifications

Table 10 lists the interfaces for the PA-5000 Series.

Table 10. Interface Specifications

Specification	Description
Ethernet ports	12 RJ-45 10/100/1000Mbps ports for network traffic.
SFP ports	Eight Small Form-Factor Pluggable (SFP) ports for network traffic.
SFP+ ports	PA-5060/PA-5050 only: Four 10 Gigabit Small Form-Factor Pluggable (SFP+) ports for network traffic.
Management ports	One RJ-45 port to access the device CLI through an Ethernet interface.
Management console port	One RJ-45 port for connecting a serial console. Use these settings: <ul style="list-style-type: none"> – Data rate: 9600 – Data bits: 8 – Parity: none – Stop bits: 1 – Flow control: None
High-availability (HA) port	Two RJ-45 ports for high-availability control and synchronization.
USB ports	One USB port that you can use to bootstrap the firewall. For details, see “Front Panel” on page 6.

Electrical Specifications

Table 11 lists electrical specifications for the PA-5000 Series.

Table 11. Electrical Specifications

Specification	Description
Maximum internal power dissipation	450W
AC voltage	100-240VAC, 8-4A, 50-60 Hz
DC voltage	-40 to -72VDC, 15A

Environmental Specifications

Table 12 lists environmental specifications for the PA-5000 Series.

Table 12. Environmental Specifications

Specification	Description
Operating temperature range	0° to 40°C (Verified by NEBS GR-63 compliance testing up to 50°C)
Storage temperature range	-20° to 70°C
Humidity	5% to 90% non-condensing
System air flow	Side to side (While facing the front of the firewall, the air enters from the right and exits on the left)

Chapter 5

Compliance Statement

NEBS Requirements

This section describes the Network Equipment Building System (NEBS) requirements for the PA-5000 Series.

- The PA-5000 Series is intended to be installed in a Network Telecommunication Facilities (Central Office) as part of a Common Bonding Network (CNB).
- The battery return (BR) input terminals are considered to be an Isolated DC return (DC-1).
- Bare conductors must be coated with an appropriate antioxidant compound before crimp connections are made. All un-plated connectors, braided strap, and buss bars must be brought to a bright finish and then coated with an antioxidant before they are connected.
- Fastening hardware shall be compatible with the materials being joined and shall preclude loosening, deterioration, and electrochemical corrosion of the hardware and the joined materials.



WARNING: *The intra-building ports of this equipment or subassembly is suitable for connection to intra-building or unexposed wiring or cabling only. The intra-building ports of equipment or subassembly must not be metallicity connected to interface that connect to the OSP or it's wiring. These interfaces are designed for use as intra-building interfaces only (Type 2 or 4 ports as described in GR-1089-CORE, issue 5) and require isolation from the exposed OSP cabling. The addition of primary protectors is not sufficient protection in order to connect these interfaces metallicity to OSP wiring. INtra-building cabling must be shielded and grounded at both ends.*

VCCI Statement

This section provides the compliance statement for the Voluntary Control Council for Interference by Information Technology Equipment (VCCI), which governs radio frequency emissions in Japan.

The following information is in accordance to VCCI Class A requirements:

この装置は、クラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。 VCCI-A

Translation: This is a Class A product. In a domestic environment this product may cause radio interference, in which case the user may be required to take corrective actions.

BSMI EMC Statement

User warning: This is a Class A product, when used in a residential environment it may cause radio interference. In this case, the user will be required to take adequate measures.

Manufacturer: Flextronics International

Country of Origin: Made in the USA with parts of domestic and foreign origin.

Input Frequency: 50-60 Hertz (Hz)

Input Voltage (AC): 100 to 240 Volts

BSMI EMC 聲明

警告使用者：

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策

製造商：偉創力國際

原產地：美國 / 部份零組件產地為美國及其它國家。

輸入頻率：50-60 赫茲 (Hz)

輸入電壓 (AC)：100 ~ 240 伏特